

How to Update WF R2 Firmware

FIRMWARE SUPPORT

Introduction

This document is a guide for how to use the WF R2 update tool, including notes on how to overcome some possible PC setup related errors.

You can find a [video tutorial](#) of how to update the WF R2 to the latest firmware [here](#).

Equipment Required

- Windows 10 or newer PC
- WFR2UpdateTool.exe loaded on drive or desktop
- USB-A to USB-C cable, USB 2.0 or newer

Updating the WF R2 Firmware

1. Turn on the WF R2.

2. Launch the WFR2UpdateTool app.

Make sure that the app is located on your local drive, Windows (C:). Double click the app to launch.

3. Your PC may present a security warning since the executable was downloaded from an online

- If your PC shows a dialogue stating “Windows protected your PC” select “more info” then click the “Run anyway” option that appears, as shown in Figure 1.

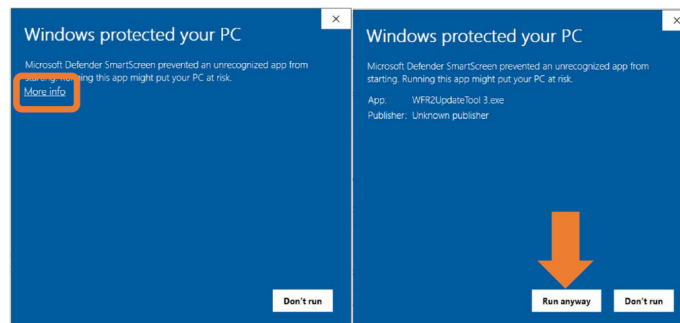


Figure 1: “Windows protected your PC” security dialogue

4. The popup in Figure 2 will appear when the update tool is ready. Plug in the powered on WF R2 via the USB cable. source. Power on the amplifier.