

How to Update Infinium[®] Controller (BA C1) Firmware

TECHNICAL BULLETIN

1. Download the Firmware

[Click this link to download the latest Infinium Controller firmware](#) package and accompanying release notes to your PC.

2. Access the Controller Web Control Interface (WCI)

Open a web browser and log in to the Infinium Controller's **Web Control Interface (WCI)**.

3. Upload the Firmware File

From the WCI, browse to the firmware file you downloaded and select it to begin the update.

Note: The installation process may take up to **10 minutes** under normal network conditions.

Additional Information

Detailed instructions for updating firmware can be found in the **Infinium Controller & Transmitter Manual (MAN 297)**.